


Wood screw

We recommend 80mm for unboarded roofs, for roofs with boarding and counter battens at least 120mm!


Wood screw VA

943108-080	(458 080)	8x80
943108-100	(458 100)	8x100
943108-120	(458 120)	8x120
943108-150	(458 150)	8x150
943108-200	(458 200)	8x200

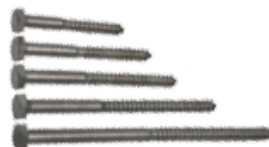

Galvanized wood screw

942108-080	(455 080)	8x80
942108-100	(455 100)	8x100
942108-120	(455 120)	8x120
942108-150	(455 150)	8x150
942108-200	(455 200)	8x200

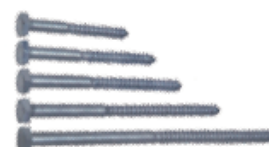


195000-002	(457 001)	Torx T40-Bit for wood screws with flat head suitable for Rapid2+ and newer systems
------------	-----------	--



Wood screw with flat head VA 1.4301

943208-080	(458 080)	8x80
943208-100	(458 100)	8x100
943208-120	(458 120)	8x120
943208-160	(458 160)	8x160
943208-200	(458 200)	8x200
943208-240		8x240
943208-260		8x260
943208-300	(458 300)	8x300
943208-340		8x340
943208-360		8x360
943208-400	(458 400)	8x400

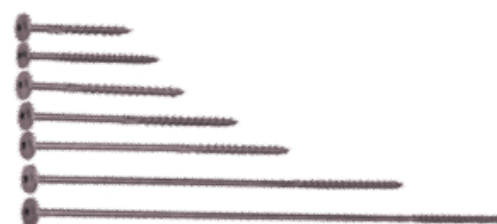

Galvanized wood screw with flat head

942208-080	(457 080)	8x80
942208-100	(457 100)	8x100
942208-120	(457 120)	8x120
942208-160	(457 160)	8x160
942208-200	(457 200)	8x200
942208-240		8x240
942208-260		8x260
942208-300	(457 300)	8x300
942208-340		8x340
942208-360		8x360
942208-400	(457 400)	8x400



EPDM-rubber inlay 3mm self-adhesive, 10m-roll, UV-resistant

for example for clamps for trapezoidal sheet metal or for laminate modules.

973000-013	(400 750-25)	25mm wide
973000-014	(400 750-48)	48mm wide
973000-015	(400 750-80)	80mm wide



195000-001	(400873-SL)	Ratchet wrench SW15 suitable for flange nut M10
------------	-------------	--

